

# RF-BM-ND04 and RF-BM-ND04I nRF52832 Bluetooth 5.0 Low Energy and Bluetooth Mesh Module

Version 1.2

Shenzhen RF-star Technology Co., Ltd.

May 26<sup>th</sup>, 2023

All rights reserved. Those responsible for unauthorized reproduction will be prosecuted.





### 1 Device Overview

### 1.1 Module Series

There is a series of RF-BM-ND04(I) Bluetooth 5.0 Low Energy modules. All of them are based on Nordic nRF52832 SoC. Those modules are pin-to-pin compatible with each other as well.

Table 1. Module Series of RF-BM-ND04(I)

Model	Antenna Output Mode	Chip Model	TX Power	FLASH	RAM	Protocol
ND04	PCB onboard					BLE5.0
NDOAL	IPEX connector/Half-	nRF52832	+4 dBm	512 KB	64 KB	Bluetooth Mesh
ND04I	hole RF pin					Didetootii Mesii

### 1.2 Description

RF-BM-ND04(I) is an RF module based on Nordic BLE SoC nRF52832 with ARM® Cortex®-M4 32-bit processor. It integrates a 32.768 kHz and a 32 MHz crystal, an LC filter, an antenna matching, and a meander line inverted-F PCB antenna or the IPEX connector respectively. It supports BLE stack v5.0 including the high-speed 2 Mbps feature and can be preprogrammed with serial interface communication protocols, such as NFC, ANT and 2.4 GHz proprietary for simple programming. RF-BM-ND04(I) also supports Bluetooth mesh which can be run concurrently with Bluetooth LE, enabling smartphones to provision, commission, configure and control mesh nodes. The module has NFC-A Tag for use in simplified pairing and payment solutions. It has numerous digital peripherals and interfaces such as ADC, PDM, PWM, I²C and I²S for many applications. It features low power consumption, small size, robust connection distance, and rigid reliability. 1.27-mm pitch stamp stick package for easy assembling and cost-effective PCB design.

### 1.3 Key Features

- RF Features
  - Bluetooth 5.0 low energy
  - Bluetooth Mesh
- NFC
- ANT
- 2.4 GHz proprietary
- TX power: -20 dBm to +4 dBm
- ARM® Cortex®-M4 32-bit processor with FPU, 64 MHz
- Supply voltage range 1.7 V ~ 3.6 V
- Memory
  - 512 KB flash
  - 64 KB RAM

- Rich peripherals
  - NFC-A
  - 12-bit, 200 ksps ADC
  - 29 GPIOs
  - PWM
  - PDM
  - SPI master/slave
  - I2C master/slave
  - I<sup>2</sup>S
  - UART (CTS/RTS)
- Dimension: 24.8 mm x 15.0 mm x 2.3 mm
- Certificates of RF-BM-ND04: FCC, SRRC,CE




# 1.4 Applications

- Internet of Things (IoT)
- Internet gateway
- Industrial control
- Home automation
- Smart plug and metering
- Beacons
- Access control


- IP Network sensor nodes
- Security systems
- Wearables
- Building automation
- Retail
- Sensor networks
- Medical devices

### 1.5 Functional Block Diagram

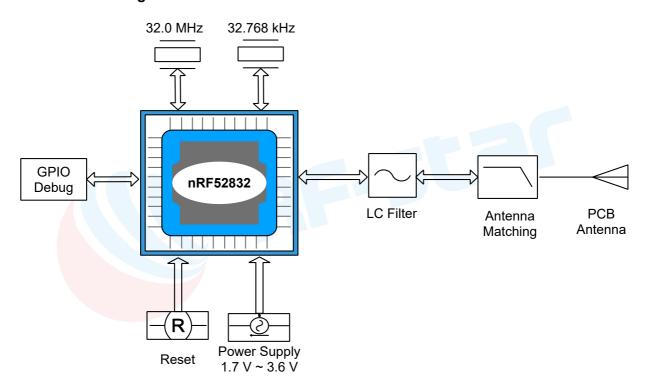

RF-BM-ND04



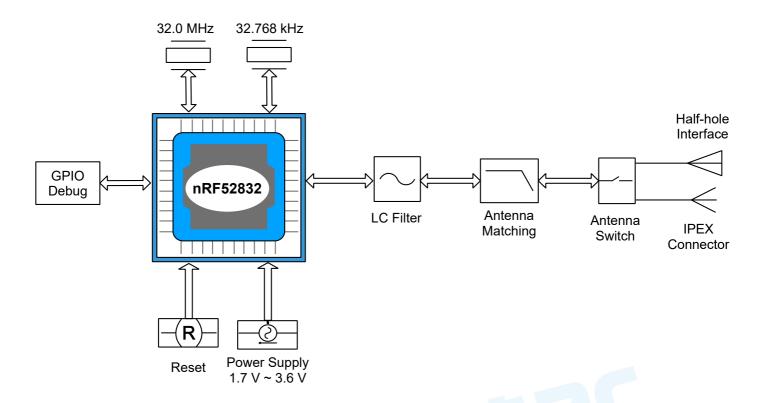

RF-BM-ND04I
Figure 1. Functional Block Diagram of RF-BM-ND04(I)

### 1.6 Part Number Conventions

The part numbers are of the form of RF-BM-ND04(I) where the fields are defined as follows:

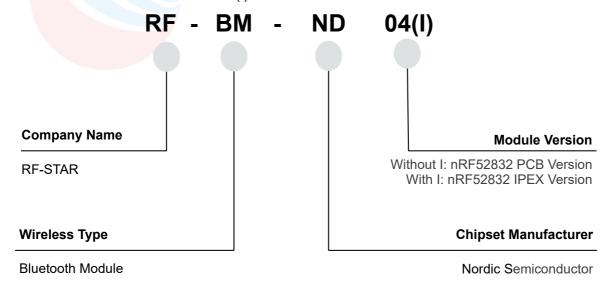


Figure 2. Part Number Conventions of RF-BM-ND04(I)



# **Table of Contents**

1 Device Overview	1
1.1 Module Series	1
1.2 Description	1
1.3 Key Features	1
1.4 Applications	2
1.5 Functional Block Diagram	2
1.6 Part Number Conventions	3
Table of Contents	4
2 Module Configuration and Functions	6
2.1 Module Parameters	6
2.2 Module Pin Diagram	7
2.3 Pin Functions	7
3 Specifications	12
3.1 Recommended Operating Conditions	
3.2 Handling Ratings	12
3.3 Pow <mark>er C</mark> onsumption	12
4 Application <mark>, Imple</mark> mentation, and Layout	13
4.1 Module Photos	13
4.2 Recommended PCB Footprint	13
4.3 Schematic Diagram	14
4.4 Reference Design	15
4.5 Antenna	16
4.5.1 Antenna Design Recommendation	16
4.5.2 IPEX Connector	17
4.5.3 Antenna Output Mode Modification	18
4.5.4 External Antenna Design Recommendation of the Half-Hole ANT Pin	18
4.6 Basic Operation of Hardware Design	19
4.7 Trouble Shooting	20
4.7.1 Unsatisfactory Transmission Distance	20
4.7.2 Vulnerable Module	21
4.7.3 High Bit Error Rate	21
4.8 Electrostatics Discharge Warnings	21



### www.szrfstar.com

4.9 Soldering and Reflow Condition	21
5 Optional Package Specification	23
6 Certification	25
6.1 FCC	25
6.2 SRRC	25
6.3 CE	26
7 Revision History	27
8 Contact Us	28





# 2 Module Configuration and Functions

# 2.1 Module Parameters

Table 2. Parameters of RF-BM-ND04(I)

RF52832
$7 \text{ V} \sim 3.6 \text{ V}$ , recommended to $3.3 \text{ V}$
402 MHz ~ 2480 MHz
20.0 dBm ~ +4.0 dBm (Typical: 0 dBm)
96 dBm
Mbps, 2 Mbps
.3 mA peak current in TX (0 dBm) .4 mA peak current in RX
9
2 MHz, 32.768 kHz
4 KB
12 KB
MT Packaging (1.27-mm half-hole pitch stamp stick)
20 kHz
4.8 mm x 15.0 mm x 2.3 mm
F-BM-ND04: PCB antenna
F-BM-ND04I: IPEX connector / half-hole RF ANT pin
40 °C ~ +85 °C
40 °C ~ +125 °C
4 1 N 2 4 F F F F F F F F F F F F F F F F F F



### 2.2 Module Pin Diagram

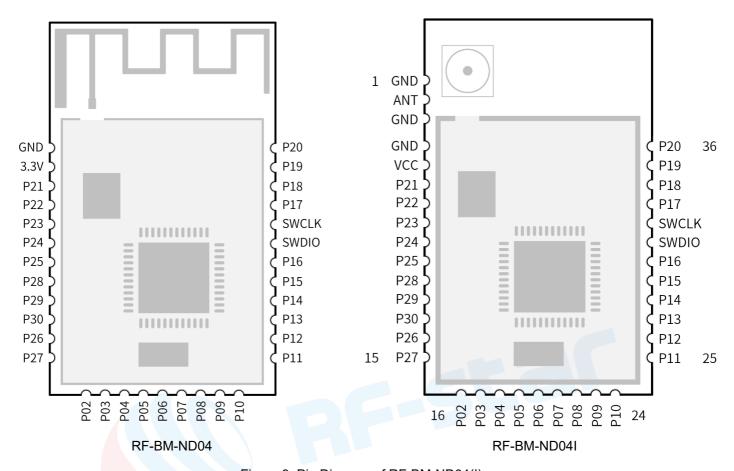


Figure 3. Pin Diagram of RF-BM-ND04(I)

# 2.3 Pin Functions

Table 3. Pin Functions of RF-BM-ND04

Pin	Name	Chip Pin	Pin Type	Description
1	GND	GND	GND	GND
2	VCC	VCC	Power	Power supply 1.7 V ~ 3.6 V, Recommend 3.3 V
3	P21/RST	P0.21 nRESET	Digital I/O	General purpose I/O  Reset, active low. Internal pullup.
4	P22	P0.22	Digital I/O	General purpose I/O
5	P23	P0.23	Digital I/O	General purpose I/O
6	P24	P0.24	Digital I/O	General purpose I/O
7	P25	P0.25	Digital I/O	General purpose I/O
8	P28	P0.28/AIN4	Digital I/O Analog input	General purpose I/O SAADC/COMP/LPCOMP input



9	P29	P0.29/AIN5	Digital I/O	General purpose I/O
	. =•	. 0.20,	Analog input	SAADC/COMP/LPCOMP input
10	P30	P0.30/AIN6	Digital I/O	General purpose I/O
10	1 50	1 0.30/AIN0	Analog input	SAADC/COMP/LPCOMP input
11	P26	P0.26	Digital I/O	General purpose I/O
12	P27	P0.27	Digital I/O	General purpose I/O
40	DOO	DO OO/AINO	Digital I/O	General purpose I/O
13	P02	P0.02/AIN0	Analog input	SAADC/COMP/LPCOMP input
	<b>D</b> 00	D0 00/AINI4	Digital I/O	General purpose I/O
14	P03	P0.03/AIN1	Analog input	SAADC/COMP/LPCOMP input
4=	D0.4	D0 04/AINO	Digital I/O	General purpose I/O
15	P04	P0.04/AIN2	Analog input	SAADC/COMP/LPCOMP input
			Digital I/O	General purpose I/O
16	P05	P0.05/AIN3	Analog input	SAADC/COMP/LPCOMP input
17	P06	P0.06	Digital I/O	General purpose I/O
18	P07	P0.07	Digital I/O	General purpose I/O
19	P08	P0.08	Digital I/O	General purpose I/O
	<b>D</b> 00	P0.09	Digital I/O	General purpose I/O
20	P09	NFC1	NFC input	NFC antenna connction
	D40	P0.10	Digital I/O	General purpose I/O
21	P10	NFC2	NFC output	NFC antenna connction
22	P11	P0.11	Digital I/O	General purpose I/O
23	P12	P0.12	Digital I/O	General purpose I/O
24	P13	P0.13	Digital I/O	General purpose I/O
0.5	D44	P0.14	Divital I/O	General purpose I/O
25	P14	TRACEDATA[3]	Digital I/O	Trace port output
00	D4 <i>E</i>	P0.15	Disit-11/0	General purpose I/O
26	P15	TRACEDATA[2]	Digital I/O	Trace port output
27	P16	P0.16	Digital I/O	General purpose I/O



		TRACEDATA[1]		Trace port output
28	SWDIO	SWDIO	Digital I/O	Serial wire debug I/O for debugging and programming
29	SWCLK	SWDCLK	Digital input	Serial wire debug clock input for debugging and programming
30	P17	P0.17	Digital I/O	General purpose I/O
31	P18	P0.18 TRACEDATA[0] SWO	Digital I/O	General purpose I/O Trace port output Single wire output
32	P19	P0.19	Digital I/O	General purpose I/O
33	P20	P0.20 TRACECLK	Digital I/O	General purpose I/O Trace port clock output

Table 4. Pin Functions of RF-BM-ND04I

Pin	Name	Chip Pin	Pin Type	Description
1	GND	GND	GND	Ground
2	ANT	ANT	ANT	External RF antenna interface
3	GND	GND	GND	Ground
4	GND	GND	GND	Ground
5	VCC	VCC	Power	Power supply 1.7 V ~ 3.6 V, Recommend 3.3 V
	DOL/DOT	P0.21	5: " 11/0	General purpose I/O
6	P21/RST	nRESET	Digital I/O	Reset, active low. Internal pullup.
7	P22	P0.22	Digital I/O	General purpose I/O
8	P23	P0.23	Digital I/O	General purpose I/O
9	P24	P0.24	Digital I/O	General purpose I/O
10	P25	P0.25	Digital I/O	General purpose I/O
	Dog	D0 00/AINI4	Digital I/O	General purpose I/O
11	P28	P0.28/AIN4	Analog input	SAADC/COMP/LPCOMP input
40	Doo	D0 00/AINE	Digital I/O	General purpose I/O
12	P29 P0.29/AIN5 Analog in	Analog input	SAADC/COMP/LPCOMP input	



42	Dao	P0.30/AIN6	Digital I/O	General purpose I/O
13	P30	P0.30/AIN6	Analog input	SAADC/COMP/LPCOMP input
14	P26	P0.26	Digital I/O	General purpose I/O
15	P27	P0.27	Digital I/O	General purpose I/O
40	Dog	Do co/Albio	Digital I/O	General purpose I/O
16	P02	P0.02/AIN0	Analog input	SAADC/COMP/LPCOMP input
47	Doo	D0.00/AINI4	Digital I/O	General purpose I/O
17	P03	P0.03/AIN1	Analog input	SAADC/COMP/LPCOMP input
40	D04	DO OA/AINO	Digital I/O	General purpose I/O
18	P04	P0.04/AIN2	Analog input	SAADC/COMP/LPCOMP input
40	Doc	DO OF (AINIO	Digital I/O	General purpose I/O
19	P05	P0.05/AIN3	Analog input	SAADC/COMP/LPCOMP input
20	P06	P0.06	Digital I/O	General purpose I/O
21	P07	P0.07	Digital I/O	General purpose I/O
22	P08	P0.08	Digital I/O	General purpose I/O
	Doo	P0.09	Digital I/O	General purpose I/O
23	P09	NFC1	NFC input	NFC antenna connction
	D40	P0.10	Digital I/O	General purpose I/O
24	P10	NFC2	NFC output	NFC antenna connction
25	P11	P0.11	Digital I/O	General purpose I/O
26	P12	P0.12	Digital I/O	General purpose I/O
27	P13	P0.13	Digital I/O	General purpose I/O
	D//	P0.14	D: '' 11/0	General purpose I/O
28	P14	TRACEDATA[3]	Digital I/O	Trace port output
20	D4 <i>E</i>	P0.15	Digital I/O	General purpose I/O
29	P15	TRACEDATA[2]	Digital I/O	Trace port output
20	D46	P0.16	Digital I/O	General purpose I/O
30	P16	TRACEDATA[1]	Digital I/O	Trace port output
31	SWDIO	SWDIO	Digital I/O	Serial wire debug I/O for debugging and



				programming
32	SWCLK	SWDCLK	Digital input	Serial wire debug clock input for debugging and programming
33	P17	P0.17	Digital I/O	General purpose I/O
34	P18	P0.18 TRACEDATA[0] SWO	Digital I/O	General purpose I/O  Trace port output  Single wire output
35	P19	P0.19	Digital I/O	General purpose I/O
36	P20	P0.20 TRACECLK	Digital I/O	General purpose I/O  Trace port clock output





# 3 Specifications

# 3.1 Recommended Operating Conditions

The functional operation does not guarantee performance beyond the limits of the conditional parameter values in the table below. Long-term work beyond this limit will affect the reliability of the module more or less.

Table 5. Recommended Operating Conditions of RF-BM-ND04(I)

Items	Condition	Min.	Тур.	Max.	Unit
Operating Supply Voltage	Battery Mode	1.7	3.3	3.6	V
Operating Temperature	1	-40	+25	+85	$^{\circ}$
Environmental Hot Pendulum	1	-20		+20	°C/min

### 3.2 Handling Ratings

Table 6. Handling Ratings of RF-BM-ND04(I)

Items	Condition	Min.	Тур.	Max.	Unit
Storage Temperature	Tstg	-40	+25	+125	$^{\circ}\mathbb{C}$
Human Body Model	НВМ		±4000		V
Moisture Sensitivity Level			3		
Charged Dev <mark>ice M</mark> odel			±750		V

# 3.3 Power Consumption


Table 7. Power Consumption

Event	Average Current	Testing Conditions / Remark
Sleeping	2.62 μΑ	EN disconnected
Broadcast	77.70 µA	Broadcast cycle: 200 ms
Broadcast	30.01 μA	Broadcast cycle: 500 ms
Broadcast	15.64 µA	Broadcast cycle: 1000 ms
Broadcast	8.90 µA	Broadcast cycle: 2000 ms
Broadcast	4.27 μΑ	Broadcast cycle: 5000 ms
Connection	72.80 µA	Connection cycle: 50 ms
Connection	38.28 µA	Connection cycle: 100 ms



# 4 Application, Implementation, and Layout


# **4.1 Module Photos**

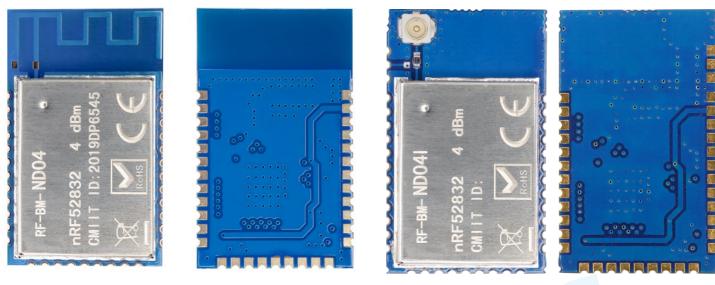

RF-BM-ND04 RF-BM-ND04I

Figure 4. Photos of RF-BM-ND04(I)

# **4.2 Recommended PCB Footprint**

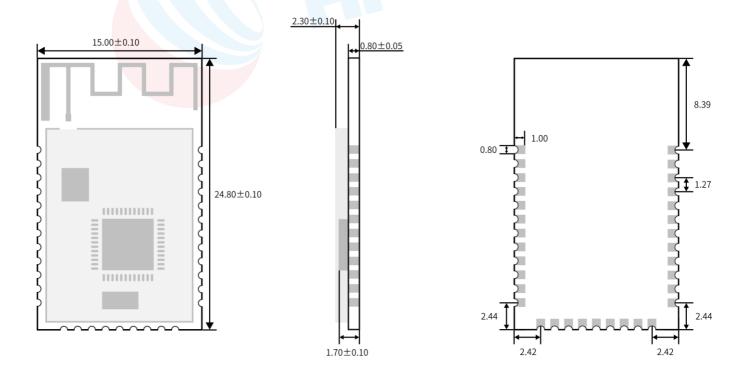

RF-BM-ND04




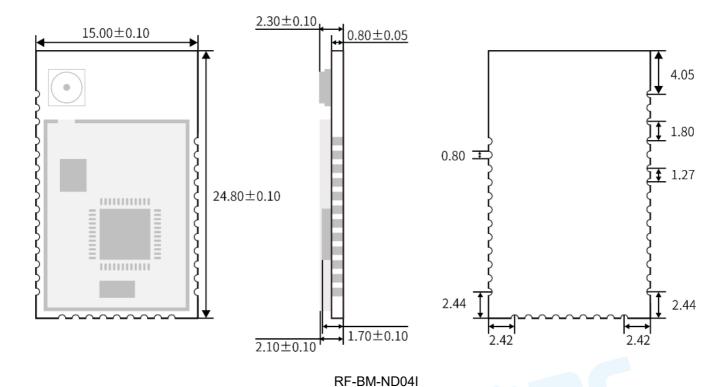



Figure 5. Recommended PCB Footprint of RF-BM-ND04(I) (mm)

# 4.3 Schematic Diagram



RF-BM-ND04

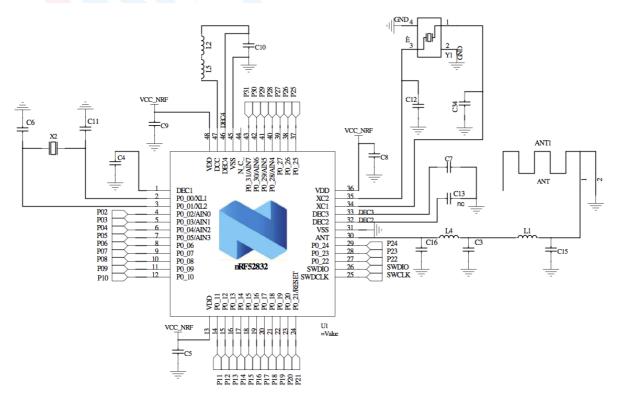


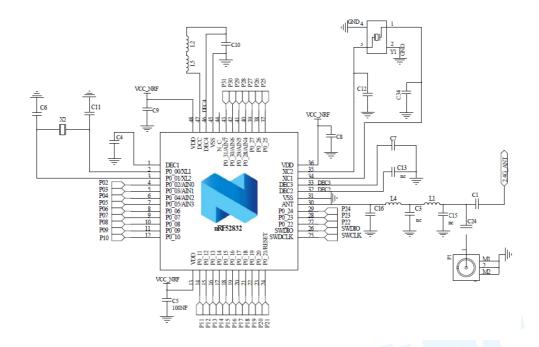

RF-BM-ND04I

Figure 6. Schematic Diagram of RF-BM-ND04(I)


# 4.4 Reference Design

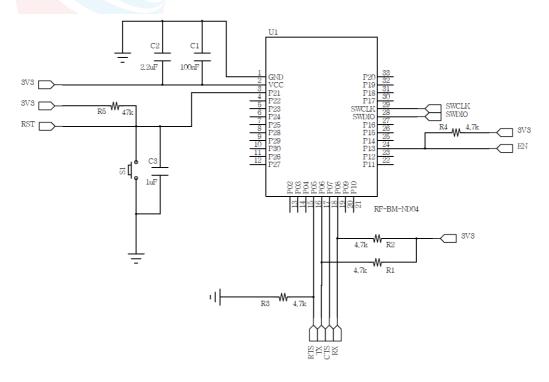

Note: EN falling edge active.

RF-BM-ND04



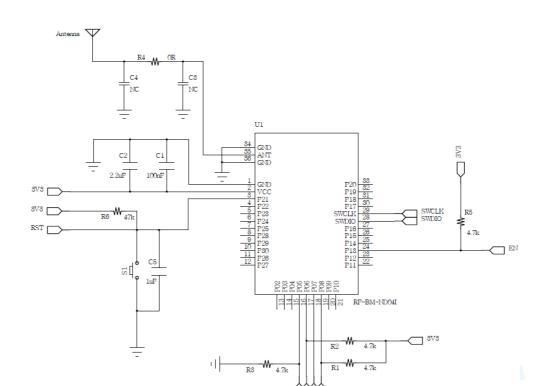

Note: EN falling edge active.

RF-BM-ND04I

Figure 7. Reference Design of RF-BM-ND04(I)

### 4.5 Antenna

### 4.5.1 Antenna Design Recommendation

- 1. The antenna installation structure has a great influence on the module performance. It is necessary to ensure the antenna is exposed and preferably vertically upward. When the module is installed inside of the case, a high-quality antenna extension wire can be used to extend the antenna to the outside of the case.
- 2. The antenna must not be installed inside the metal case, which will cause the transmission distance to be greatly weakened.
- 3. The recommendation of antenna layout.

The inverted-F antenna position on PCB is free-space electromagnetic radiation. The location and layout of the antenna is a key factor to increase the data rate and transmission range.

Therefore, the layout of the module antenna location and routing is recommended as follows:

- (1) Place the antenna on the edge (corner) of the PCB.
- (2) Make sure that there is no signal line or copper foil in each layer below the antenna.
- (3) It is best to hollow out the antenna position in the following figure to ensure that the S11 of the module is minimally affected.



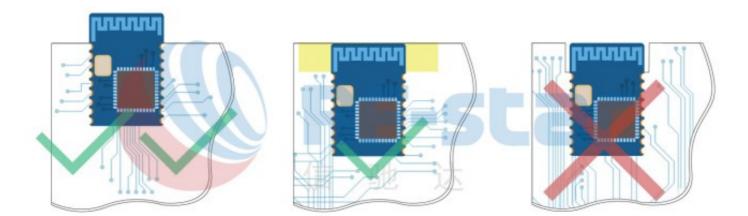


Figure 8. Recommendation of Antenna Layout

Note: The hollow-out position is based on the antenna used.

### 4.5.2 IPEX Connector

RF-BM-ND04I module is integrated the IPEX version 1 antenna seat, the specification of the antenna seat is as follow:

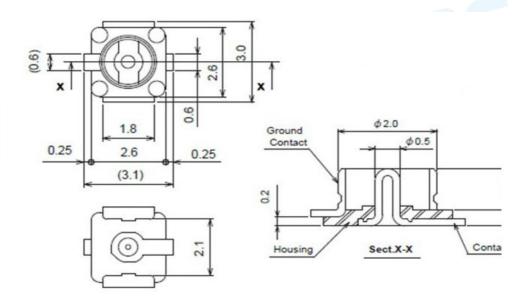


Figure 9. Specification of Antenna Seat



The specification of the IPEX wire end is as follow:

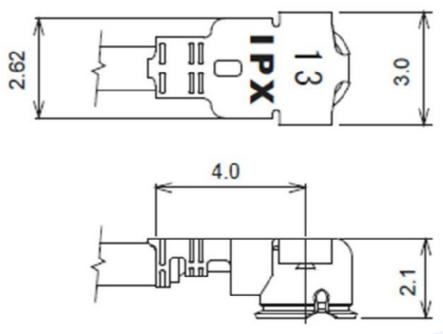


Figure 10. Specification of IPEX Wire

### 4.5.3 Antenna Output Mode Modification

RF-BM-ND04I has two antenna output modes: IPEX connector output and stamp half-hole antenna output (ANT pin, see pin function table for details).

The default delivery is IPEX connector mode. Under IPEX connector mode, C1 is off and C2 is welded. If you would like to change to half-hole antenna output mode, please disconnect C2 and weld C2. The locations of C1 and C2 (8 pF) are shown in the figure below.

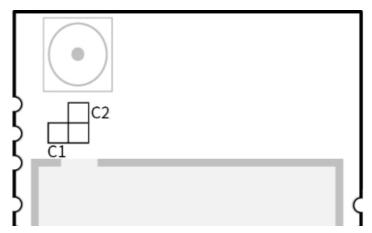


Figure 11. Antenna Output Mode Change

### 4.5.4 External Antenna Design Recommendation of the Half-Hole ANT Pin

1. A  $\Pi$ -type matching circuit is reserved for the antenna, and 50  $\Omega$  impedance control is performed on the RF traces.



The traces are as short as possible, and 135° or arc traces are used as much as possible. No vias are used to change layers. More GND vias are placed around the RF traces.

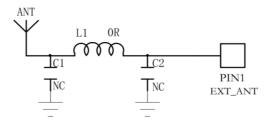


Figure 12. Reference Design of the External Antenna

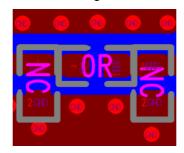


Figure 13. Reference Design of the External Antenna Traces

2. The RF trace width and copper-clad spacing can be calculated by SI9000 software, and the impedance is controlled to 50 Ω according to the actual board thickness, number of layers, plate, dielectric thickness, dielectric constant, copper thickness, line width, line spacing, and solder mask thickness.

Example: FR4 is a double-layer board with a thickness of 1.0 mm. Through calculation, the width of the trace is 0.8254 mm, and the spacing between traces and copper is 0.22 mm.

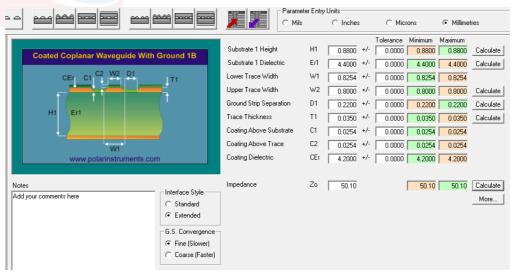


Figure 14. SI9000 Impedance Calculation Diagram

### 4.6 Basic Operation of Hardware Design

1. It is recommended to offer the module with a DC stabilized power supply, a tiny power supply ripple coefficient, and reliable ground. Please pay attention to the correct connection between the positive and negative poles of the power



- supply. Otherwise, the reverse connection may cause permanent damage to the module;
- 2. Please ensure the supply voltage is between the recommended values. The module will be permanently damaged if the voltage exceeds the maximum value. Please ensure a stable power supply and no frequently fluctuated voltage.
- 3. When designing the power supply circuit for the module, it is recommended to reserve more than 30% of the margin, which is beneficial to the long-term stable operation of the whole machine. The module should be far away from the power electromagnetic, transformer, high-frequency wiring, and other parts with large electromagnetic interference.
- 4. The bottom of the module should avoid high-frequency digital routing, high-frequency analog routing, and power routing. If it has to route the wire on the bottom of the module, for example, it is assumed that the module is soldered to the Top Layer, the copper must be spread on the connection part of the top layer and the module, and be close to the digital part of the module and routed in the Bottom Layer (all copper is well-grounded).
- 5. Assuming that the module is soldered or placed in the Top Layer, it is also wrong to randomly route the Bottom Layer or other layers, which will affect the spurs and receiving sensitivity of the module to some degrees;
- 6. Assuming that there are devices with large electromagnetic interference around the module, which will greatly affect the module performance. It is recommended to stay away from the module according to the strength of the interference. If circumstances permit, appropriate isolation and shielding can be done.
- 7. Assuming that there are routings of large electromagnetic interference around the module (high-frequency digital, high-frequency analog, power routings), which will also greatly affect the module performance. It is recommended to stay away from the module according to the strength of the interference. If circumstances permit, appropriate isolation and shielding can be done.
- 8. It is recommended to stay away from the devices whose TTL protocol is the same 2.4 GHz physical layer, for example, USB 3.0.

### 4.7 Trouble Shooting

### 4.7.1 Unsatisfactory Transmission Distance

- When there is a linear communication obstacle, the communication distance will be correspondingly weakened.
   Temperature, humidity, and co-channel interference will lead to an increase in communication packet loss rate. The performances of ground absorption and reflection of radio waves will be poor when the module is tested close to the ground.
- 2. Seawater has a strong ability to absorb radio waves, so the test results by the seaside are poor.
- 3. The signal attenuation will be very obvious if there is a metal near the antenna or the module is placed inside the metal shell.
- 4. The incorrect power register set or the high data rate in an open-air may shorten the communication distance. The higher the data rate, the closer the distance.
- 5. The low voltage of the power supply is lower than the recommended value at ambient temperature, and the lower the voltage, the smaller the power is.



6. The unmatchable antennas and modules or the poor quality of the antenna will affect the communication distance.

### 4.7.2 Vulnerable Module

- 1. Please ensure the supply voltage is between the recommended values. The module will be permanently damaged if the voltage exceeds the maximum value. Please ensure a stable power supply and no frequently fluctuated voltage.
- 2. Please ensure the anti-static installation and the electrostatic sensitivity of high-frequency devices.
- 3. Due to some humidity-sensitive components, please ensure suitable humidity during installation and application. If there is no special demand, it is not recommended to use at too high or too low temperature.

### 4.7.3 High Bit Error Rate

- There are co-channel signal interferences nearby. It is recommended to be away from the interference sources or modify the frequency and channel to avoid interferences.
- 2. The unsatisfactory power supply may also cause garbled. It is necessary to ensure the power supply's reliability.
- 3. If the extension wire or feeder wire is of poor quality or too long, the bit error rate will be high.

### 4.8 Electrostatics Discharge Warnings

The module will be damaged for the discharge of static. RF-star suggests that all modules should follow the 3 precautions below:

- 1. According to the anti-static measures, bare hands are not allowed to touch modules.
- Modules must be placed in anti-static areas.
- 3. Take the anti-static circuitry (when inputting HV or VHF) into consideration in product design.

  Static may result in the degradation in performance of the module, even causing the failure.

### 4.9 Soldering and Reflow Condition

- 1. Heating method: Conventional Convection or IR/convection.
- 2. Solder paste composition: Sn96.5 / Ag3.0 / Cu0.5
- 3. Allowable reflow soldering times: 2 times based on the following reflow soldering profile.
- 4. Temperature profile: Reflow soldering shall be done according to the following temperature profile.
- Peak temperature: 245 °C.

Table 8. Temperature Table of Soldering and Reflow

Profile Feature	Sn-Pb Assembly	Pb-Free Assembly
Solder Paste	Sn63 / Pb37	Sn96.5 / Ag3.0 / Cu0.5
Min. Preheating Temperature (T <sub>min</sub> )	100 ℃	150 ℃



Max. Preheating Temperature (T <sub>max</sub> )	150 ℃	200 ℃
Preheating Time (T <sub>min</sub> to T <sub>max</sub> ) (t <sub>1</sub> )	60 s ~ 120 s	60 s ~ 120 s
Average Ascend Rate (T <sub>max</sub> to T <sub>p</sub> )	Max. 3 °C/s	Max. 3 ℃/s
Liquid Temperature (T <sub>L</sub> )	183 ℃	217 ℃
Time above Liquidus (t <sub>L</sub> )	60 s ~ 90 s	30 s ~ 90 s
Peak Temperature (Tp)	220 ℃ ~235 ℃	230 ℃ ~ 250 ℃
Average Descend Rate (Tp to Tmax)	Max. 6 °C/s	Max. 6 °C/s
Time from 25 ℃ to Peak Temperature (t₂)	Max. 6 minutes	Max. 8 minutes
Time of Soldering Zone (t₂)	20±10 s	20±10 s

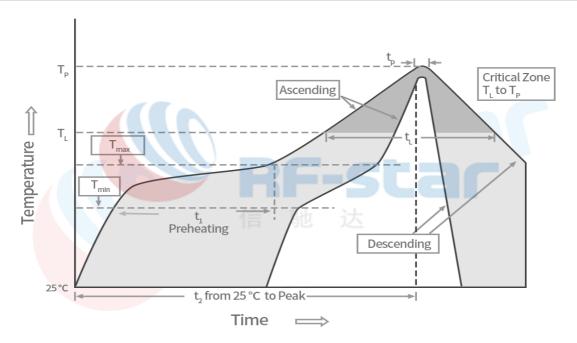


Figure 15. Recommended Reflow for Lead-Free Solder



# **5 Optional Package Specification**

The default package method is **by tray**. If you need the modules to be shipped by tape & reel, pls contact us in advance.

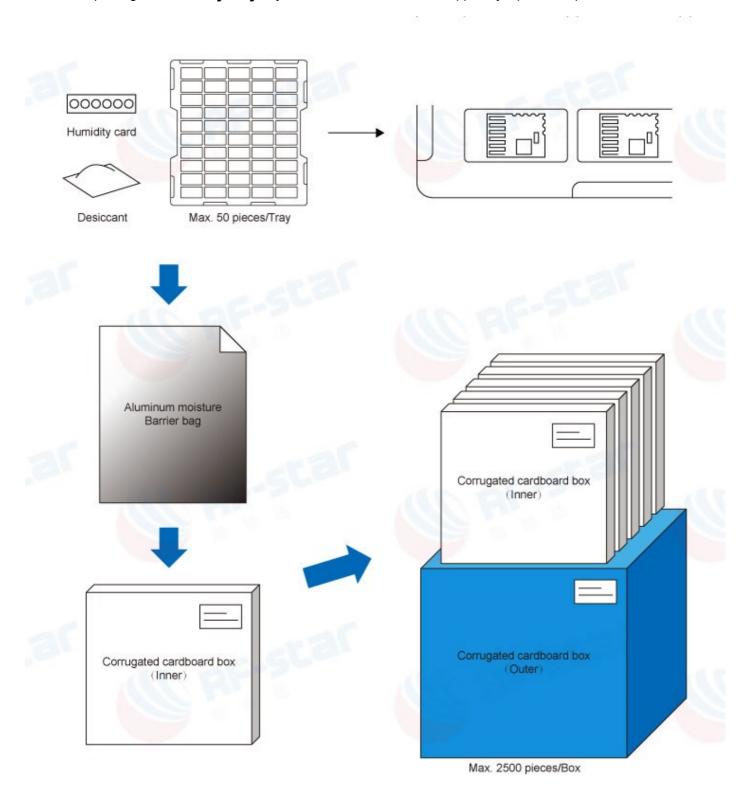


Figure 16. Default Package by Tray



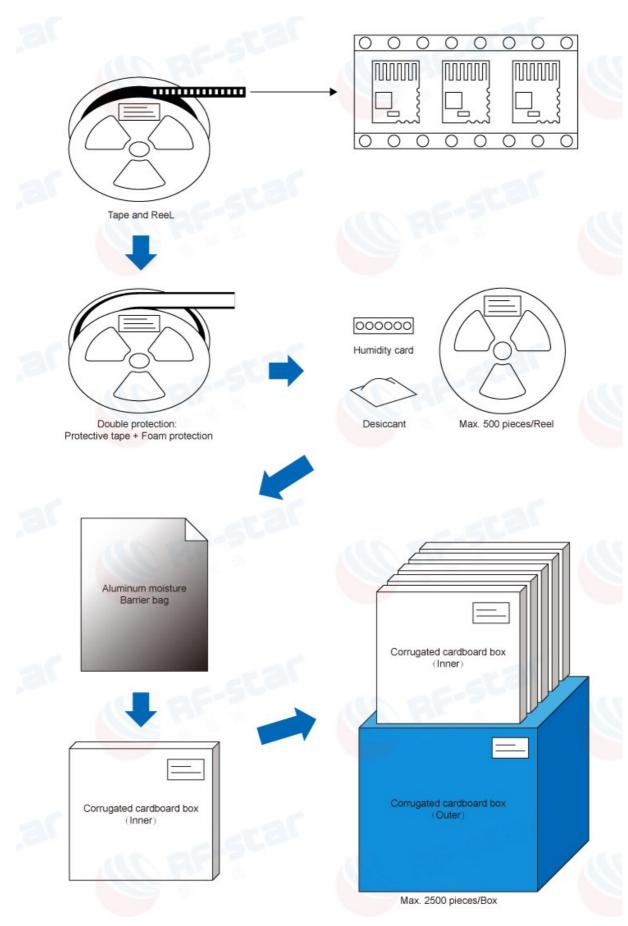


Figure 17. Package by Tape & Reel



### **6 Certification**

### 6.1 FCC

### Warnings:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2ABN2-FBMND04

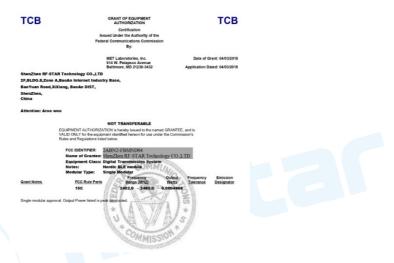


Figure 18. FCC Certificate of RF-BM-ND04

# **6.2 SRRC**

SRRC ID: 2019DP6546





Figure 19. SRRC Certificate of RF-BM-ND04



### 6.3 CE



Figure 20. CE Certificate of RF-BM-ND04



# 7 Revision History

Date	Version No.	Description
2017.01.10	V1.0	The initial version is released.
2018.01.24	V1.1	Update module picture.
2018.03.02	V1.2	Update module parameters.
2018.08.02	V1.2	Update company address.
2020.03.31	V1.2	Modify reset pin
2023.05.26	V4 0	Update MSL level.
	V1.2	Update the Shenzhen office address.

### Note:

- 1. The document will be optimized and updated from time to time. Before using this document, please make sure it is the latest version.
- 2. To obtain the latest document, please download it from the official website: <a href="www.rfstariot.com">www.szrfstar.com</a> and <a href="www.szrfstar.com">www.szrfstar.com</a>.



### **8 Contact Us**

### SHENZHEN RF-STAR TECHNOLOGY CO., LTD.

### Shenzhen HQ:

Add.: Room 502, Podium Building No. 12, Shenzhen Bay Science and Technology Ecological Park, Nanshan District,

Shenzhen, Guangdong, China, 518063

Tel.: 86-755-8632 9829

### Chengdu Branch:

Add.: N2-1604, Global Center, North No. 1700, Tianfu Avenue, Hi-Tech District, Chengdu, Sichuan, China, 610095

Tel.: 86-28-8692 5399

Email: sunny@szrfstar.com, sales@szrfstar.com

Web.: www.rfstariot.com, www.szrfstar.com

